


JACKSON

Model 5400 Wire Cage

08/25

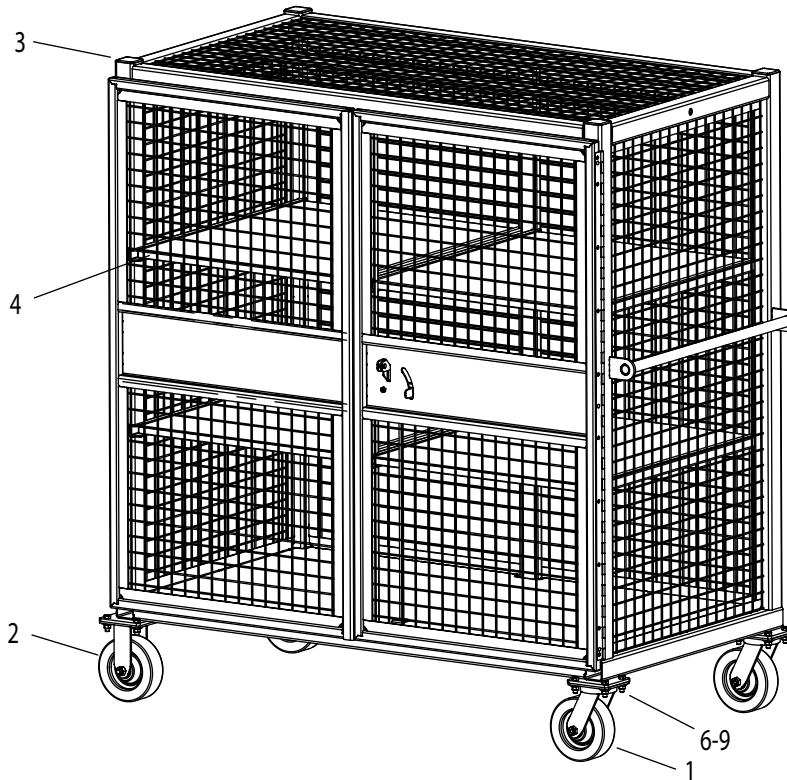

CAUTION

Only roll on a firm flat, smooth surface.

CAPACITY

- Maximum 1500 lbs.
- Maximum 250 lbs. per slide-out shelf and 500 lbs. evenly distributed on bottom pan

* NOTE: ONLY three sets of hardware (Item #s 6 thru 9) are used per caster.

INSTRUCTION SHEET AND PARTS LIST

PARTS LIST – 5400 WIRE CAGE

ITEM #	PART #	QTY	DESCRIPTION
1	506-1	2	CASTER, SWIVEL
2	506-2	2	CASTER, RIGID
3	5633WC – 1	4	PLUG, CAP
4	5400 – 132	4	SHELF, SLIDING
5	5400 – DECAL	2	DECAL (NOT SHOWN)
6	281-2D	12*	SCREW, HEX HEAD CAP 3/8–16 × 1 1/4"
7	224-141	12*	WASHER, FLAT
8	452-27	12*	WASHER, LOCK
9	452-28	12*	NUT, HEX, 3/8–16



Read and understand this material before operating or servicing the Wire Cage. Failure to understand how to safely operate and service this Wire Cage may result in injury or property damage.

This manual is free of charge. All personnel who operate the Wire Cage should have a copy of this manual and read and understand its contents. To request a copy, call or write to the address below.

JACKSON TOOL • P. O. BOX 5701 • GREENVILLE, SC 29606
877-522-8995 or 864-721-4235 • FAX 864-721-4236 • www.jacksontoolinc.com