
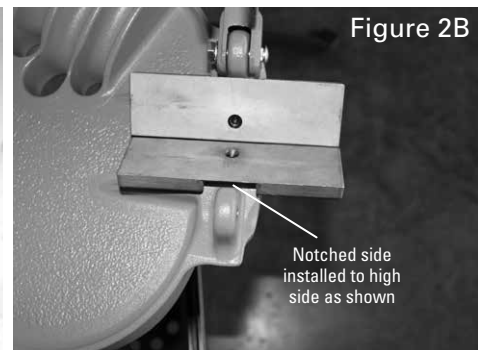
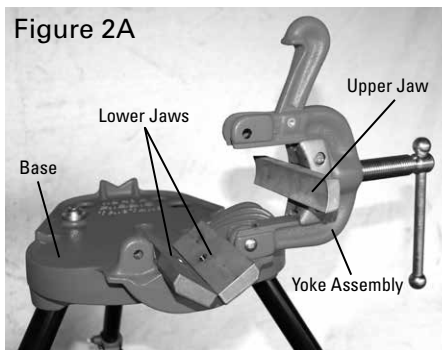


# JACKSON

## Installation Instructions for #142 JP Jaw Set

The Jackson Tool #142 JP Jaws are designed to clamp 1/2" to 2" PVC coated rigid conduit into the Ridgid® #40A yoke vise stand.

1. To install the Jackson Tool #142 JP Jaw Set into the Ridgid® #40A yoke vise stand, first swing the yoke assembly to the open position. Then remove the upper jaw from the yoke assembly, as well as the two lower jaws from the base (see Figure 1A). Keep the existing lower jaw screws for installation of the JP Jaws.

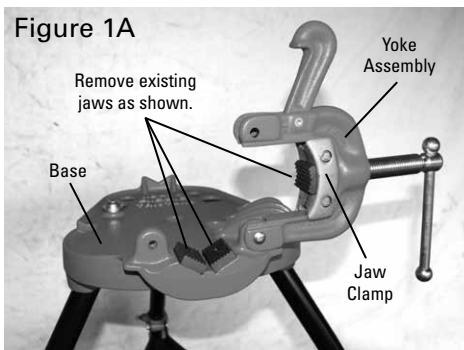

2. The two lower jaws are installed on the base of the stand (see Figure 2A) using the two lower jaw screws removed in Step 1. The notched side of the two lower jaws are installed to the high side (see Figure 2B). Then, install the upper jaw in the yoke assembly. Be sure the upper jaw is flush with the jaw clamp prior to tightening the jaw clamp.
3. Stand shown at right with JP Jaws properly installed, yoke assembly in closed position, and hook assembly locked in place.



*\*Ridgid is a registered trademark of the Ridge Tool Company.*